

# RYDIS Hybrid Robot Vacuum Cleaner

## User Manual



Learn more about  
user manual at [Moneualusa.com](https://Moneualusa.com)

### RYDIS H65

Thank you for purchasing the Moneual RYDIS H65.  
Before using the product, please read this User Manual carefully, and keep it for future reference.  
Depending on your model, some contents of this User Manual may differ from the actual product.  
The contents of this User Manual are subject to change without notice.

**MONEUAL®**




# RYDIS Hybrid Robot Vacuum Cleaner

User Manual

RYDIS H65


**MONEUAL®**

# Features

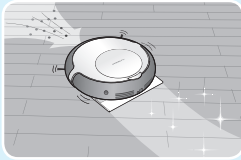


## Hybrid Cleaning

Full utilization of the 4-in-1(Twin Side Brush + Main Brush + BLDC Suction (vacuum) + Wet/Dry Disposable Mop) cleaning technology for a spotless hard floor.

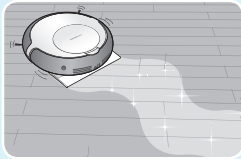


## Mop Cleaning

Utilizing the attachable full sized mop, the Mop Cleaning mode is optimized for cleaning even the finest dusts that are harmful to your health.

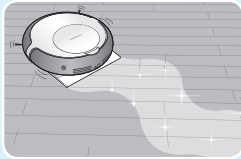


## Wet/Dry Disposable Mop

Cleaning with standard sweeping cloth in the market.

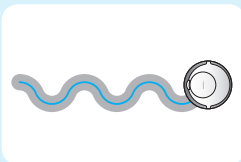

## Random S Pattern Mop Cleaning


For quiet and efficient cleaning, RYDIS H65 provides S Pattern Mop Cleaning mode.

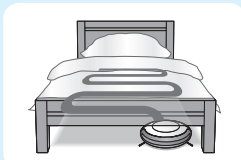

## Shadow Cleaning


You can clean areas under your bed, sofa, or furniture that are difficult to clean with an upright vacuum cleaner or by hand.

Shadow Cleaning

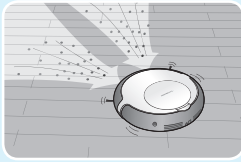


### Turbo Option

While you are using the Hybrid / Vacuum / Shadow Cleaning, the Turbo Option is turned on by default. Though, you can turn off the Turbo Option to increase cleaning time

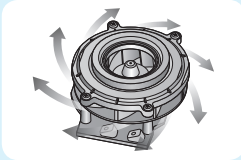

### High Performance BLDC Motor

The cleaning performance is excellent due to the powerful BLDC (suction) motor. The BLDC motor is 30% more powerful than a DC motor, and the lifetime is approximately 10 times as long (estimated: 5,000 hours).

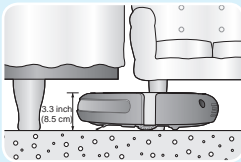

### 3.3 inches (8.5 cm) Slim Design

With a slim design, the RYDIS H65 is just 3.3 inches (8.5 cm) high, enabling it to clean under the bed and the sofa, where it is difficult to clean with a vacuum cleaner or by hand.




### Eco-friendly Lithium Iron Phosphate Battery

The RYDIS H65 uses an eco-friendly battery that does not contain any heavy metals or acids that are harmful to the human body. The Lithium Iron Phosphate Battery has a lifetime that is approximately three times longer (1,000 cycles) than the standard lithium-based or nickel-based batteries. It provides higher levels of operational safety due to the high resistance to heat and explosion.



### Auto Charging

After it is finished cleaning or when it detects that the battery is low, the RYDIS H65 automatically returns to the charging station and starts charging.

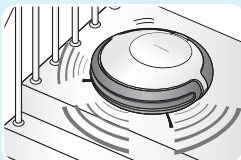

### Obstacle Avoidance and Fall Protection

The obstacle detection sensors in the bumper help the RYDIS H65 avoid obstacles and walls. The cliff detection sensors in the bottom detect height differences and prevent it from falling down stairs.

# Contents

<b>Before Use</b>	Features .....	02
	Safety Information .....	05
	What's in the Box .....	10
	Overview .....	11

<b>Installing</b>	Installing the Charging Station .....	13
	Installing the Side Brushes .....	14
	Installing the Mop .....	15
	Charging .....	17

<b>Product Operation</b>	Before You Start .....	19
	What do you want to clean? .....	20
	Hybrid Cleaning .....	21
	Vacuum Cleaning .....	22
	Mop Cleaning .....	23
	Shadow Cleaning .....	24
	Turbo Option .....	25

<b>Maintenance</b>	Language Setting .....	26
	Cleaning the Dust Bin .....	27
	Cleaning the Dust Filter .....	28
	Cleaning Sensors and Wheels .....	29
	Cleaning the Dust Inlet .....	30
	Using and Managing the Battery .....	31
	Voice Guidance .....	34
	Error Message Description .....	35


<b>Customer Support</b>	Troubleshooting .....	37
	Specifications .....	39
	Moneual Robot Vacuum Cleaner	
	Limited Warranty .....	43

# Safety Information


Please read and follow the instructions in this manual to ensure your safety and the safe use of your RYDIS H65.

## Safety symbols


In this manual, various Warnings, Cautions and Notes are provided to help you to avoid potential hazards that can hurt you and/or damage your RYDIS H65.

 You may be seriously injured up to death if you do not follow these instructions.

**Warning**






 You may be injured or your RYDIS H65 may be damaged if you do not follow this instruction.

**Caution**

 You should refer to this note when using your RYDIS H65.

**Note**

## Before you use

- 
-  **Do not install or use the RYDIS H65 in a place where it will be exposed to direct sunlight.**
    - If the power adapter becomes overheated during charging it may cause a fire, short circuit, or electrical shock.
    - The RYDIS H65 may become discolored and deformed.
  -  **Do not install the charging station on an inclined floor, and do not apply impact to the charging station.**
    - The charging station may become damaged or broken.
  -  **Do not use the product in a room with an unattended child or an elderly person.**
    - There is a risk that the child or elderly person may become frightened.
  -  **The RYDIS H65 is not intended for use by children, or by persons with reduced physical, sensory or mental capabilities, unless they have given supervision or instruction concerning the use of the RYDIS H65 by a person responsible for their safety.**
    - This may cause injury or damage the RYDIS H65.
  -  **Before you use the RYDIS H65, remove any small objects, clothes, and fragile objects from the floor.**
    - This may cause damage to the RYDIS H65 and obstruct the movement of the RYDIS H65.
    - Make sure to remove fragile objects (glass, china, flowerpot, etc.).
    - Small cloths, power cords, belts, towels, pads, and telephone cords can become entangled in the wheels or brushes.
-



**Install the charging station in a location that can be easily accessed by the RYDIS H65.**

- If you install the charging station in a corner or if there are many obstacles around the charging station, it may prevent the RYDIS H65 from automatically charging.



**Make sure that the charging station is always plugged into a power source.**

- If no power is supplied to the charging station, you will not be able to use the automatic charge function.

## When you use



**Remove objects (such as loose clothing, towels, cloths, belts, etc) scattered on the floor before cleaning. Keep objects away from brushes and wheels to prevent entanglement.**

- This may cause noise, reduce the suction power, and damage the RYDIS H65.



**Do not use the power adaptor with another appliance.**

- This may cause damage to the appliance and fire by overheating.



**Do not use or store the RYDIS H65 near flammable materials (alcohol, gasoline, kerosene, thinner, etc.) or heating sources (cigarettes, candles, stove, etc.).**

- This may cause fire and damage to the RYDIS H65.



**If you notice smoke or a burning smell coming from the RYDIS H65, immediately turn the system power switch off and contact our service center.**



**Do not stand or sit on the RYDIS H65.**

- Movement of the RYDIS H65 may cause injury or the RYDIS H65 may be damaged.



**Do not use the RYDIS H65 on a narrow high place such as a desk, table, etc.**

- The RYDIS H65 may fall off which could cause injury or damage to the product.



**Do not let the RYDIS H65 pass over or sweep up oil, pet droppings, etc.**

- This may cause malfunction of the RYDIS H65 and damage.
- Oil or pet droppings on the wheels may cause stains in other places.



**If the RYDIS H65 sucks a plastic bag in while operating, immediately remove it.**

- If you run the RYDIS H65 for a long time with the dust inlet covered with a plastic bag, the motor will overheat and the RYDIS H65 will be damaged.



**Do not press strongly or impact the bumper.**

- This may cause damage to the bumper sensors and malfunction.



**Do not use the RYDIS H65 in a place where the temperature is too low or too high (lower than 23F (-5°C) and higher than 120F (49°C)).**

- This may cause damage to the product.



**Do not use the RYDIS H65 when the dust bin is filled up.**

- This may reduce the suction power.



**Never use the RYDIS H65 without the filters.**

- Doing so may cause a malfunction of the RYDIS H65.



**Do not use the RYDIS H65 in a place where the floor or wall is made of glass or mirrors.**

- The RYDIS H65 detect obstacles by using an IR sensor, so it may not detect glass and mirrors as obstacle.



**Do not use the RYDIS H65 on a flooded floor, on stairs, on a table or shelf, in a warehouse, in a commercial building or outdoors.**



**If you have dropped or given an impact to the RYDIS H65, contact our service center.**

---

## Electrical instructions



**Please use the power source and socket with the correct Voltage and Ampere.**

- If you use a power source or socket that does not fit the power specifications, there is the risk of fire, electrical shock, and damage to the RYDIS H65.



**Make sure the power cord is not bent or crushed by heavy objects.**

- A damaged power cord may cause a fire or electrical shock.
- To repair or replace a damaged power cord, contact our qualified service center to ensure your safety.



**When plugging in or removing the power plug, always plug it in or remove it by holding the plug, not the cable.**

- Stress on the cable will damage the power cord, which may cause a fire or electrical shock.
-



**Do not touch the plug or wall socket with wet hands.**

- Doing so may cause electric shock.



**If you spill water into the RYDIS H65, unplug the power cord immediately.**

- Water can bring the risk of fire and electrical shock.
- Immediately remove the power cord from the outlet and contact our service center.



**Do not use charging stations other than the charging station that came with your RYDIS H65.**

- Overvoltage brings the risk of fire and electrical shock.



**Do not install the charging station in a location that is damp or wet, dusty, or near water.**

- This may cause a fire or an electrical shock and damage to the unit.



**Do not touch the terminal of the charging station with any metallic object (such as a clip, pin, etc.).**

- This creates the risk of fire and electrical shock.



**If you do not plan to use the RYDIS H65 for an extended period of time, turn off the system power switch at the rear of RYDIS H65.**

- The battery may be discharged if you leave the system power switch on.

## Others



**To ensure safety, only a qualified service agent should repair or disassemble the product.**

- Any repairs done by unqualified personnel may damage the RYDIS H65 and bring the risk of a fire and electrical shock.



**Dispose of the battery properly.**

- If you throw the battery into a fire or expose it to direct sunlight, there is the risk of fire and explosion.
- Dispose of your old batteries according to the local laws and regulations of your region.



**Clean the obstacle and bottom sensors periodically.**

- If the sensor becomes covered by lint and dust, the RYDIS H65 may malfunction.



**Please use the specified filter.**

- Use of a different filter will void your warranty.



**Please clean the RYDIS H65 after turning it off.**

- If you clean it when the power is on or it is operating, it may cause injury.



**Clean the main brush, dust bin, dust filter, and dust inlet periodically.**

- If you use the RYDIS H65 for a long time without cleaning it, there is the risk of malfunction and damage.

 
## Copyright and instructions

- Copyright © 2014 MONEUAL Inc. All rights reserved.
- Published January 31, 2014
- RYDIS is the trademarks or registered trademarks of MONEUAL Inc. in the Republic of Korea and/or other countries.
- RYDIS is the trademarks or registered trademarks of MONEUAL Inc. in the Republic of Korea and/or other countries.
- This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without the prior written consent of MONEUAL.
- Depending on the model and type of your appliance, some of the contents in this manual may differ from your actual product.
- MONEUAL Inc. assumes no responsibility for technical or editorial errors or omissions contained herein, nor for any incidental or consequential damages and failures of the appliance caused by not following the precautions and instructions.
- MONEUAL Inc. assumes no responsibility for damages resulting from the use of the product that is not approved by the company.

## What's in the Box



RYDIS H65  
(1400mA built-in battery)



Charging Station



Power Adaptor



Power Cord



Side Brushes (1 set)



Cleaning Brush



User Manual  
Quick Start Guide




Call Moneual Support Card

### Mop Kit

#### H65 Wet/Dry Disposable Mop

1. Mop pad for Disposable Mop
2. Disposable Mop (Wet x 3 / Dry x 3)

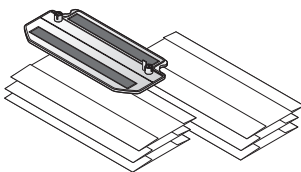


► The appearance and specifications may be changed without notice in order to improve functions or performance.


# Overview

## RYDIS H65


| Top |

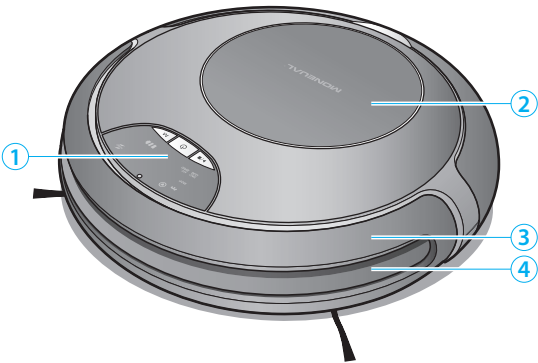

| Rear |

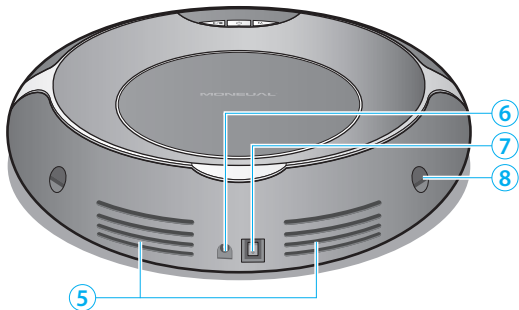


| Bottom |

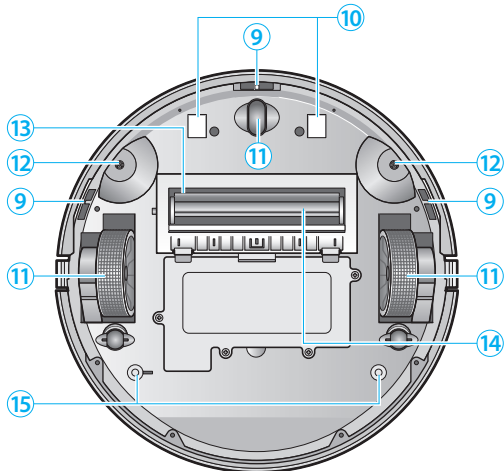


- ① Control Panel
- ② Dust Bin Cover
- ③ Bumper
- ④ Obstacle and Signal Detection Sensor
- ⑤ Air Outlet
- ⑥ Adaptor Jack
- ⑦ System Power Switch
- ⑧ Signal Receiving Sensor
- ⑨ Cliff Detection Sensors
- ⑩ Charging Terminals
- ⑪ Wheels
- ⑫ Side Brush Installation Pins
- ⑬ Dust Inlet
- ⑭ Main Brush
- ⑮ Mop Pad Installation Holes

## Wet/Dry Disposable Mop Kit

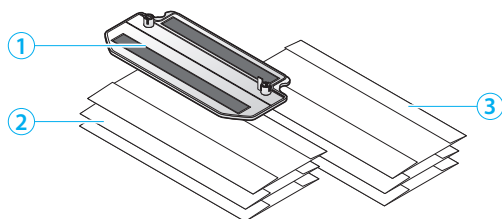

- ① Mop pad for Disposable Mop
- ② Disposable Mop (Wet x 3)
- ③ Disposable Mop (Dry x 3)


## Control Panel

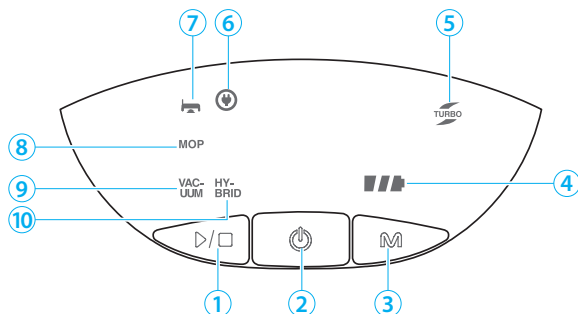


- ① Start/Stop Button
- ② Main Power Button
- ③ Cleaning Mode Selection Button
- ④ Battery Level Indicator
- ⑤ Turbo Option Indicator
- ⑥ Charging Indicator
- ⑦ Shadow Cleaning Indicator
- ⑧ Mop Cleaning Indicator
- ⑨ Vacuum Cleaning Indicator
- ⑩ Hybrid Cleaning Indicator

## Charging Station

| Front |

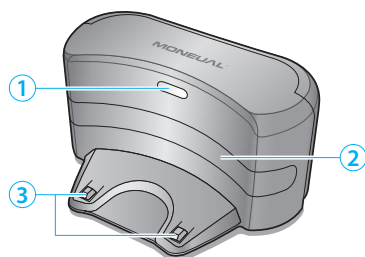


| Back |

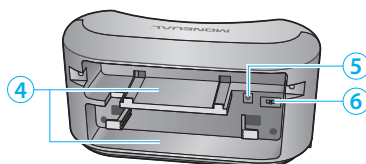


- ① Power/Charging lamp
- ② Guide Signal Transmission Sensor
- ③ Charging Terminals
- ④ Adaptor Holder
- ⑤ Adaptor Jack
- ⑥ Signal Distance Selection Switch

# Installing the Charging Station




- 1 • Connect the power adaptor.
- Set the RYDIS H65 detection distance [16ft (5m) or 26ft (8m)].
- Place the power adaptor inside of the charging station.

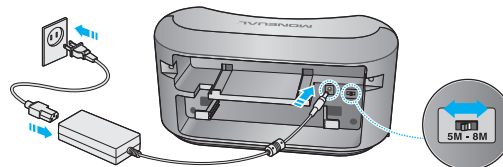

- 2 • Check the power connection and make sure blue lamp is on.

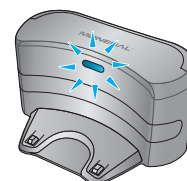



- 3 • Make sure the location of the charging station is an open area as illustrated.
  - Clear all obstacles in the area within 5ft (1.5m) in front, left, and right of the charging station.

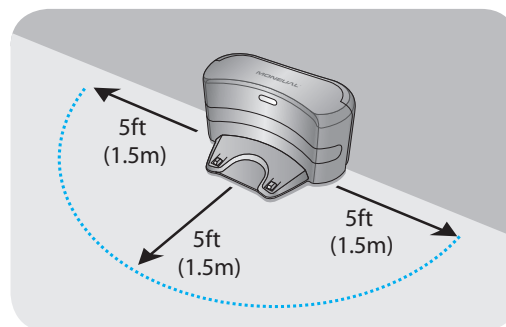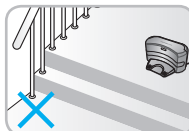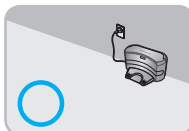

- ▶ If you install the RYDIS H65 in a place where it will be exposed to direct sunlight, the heat of the sun may interfere with the auto charging, and the RYDIS H65 may become discolored over time.
- ▶ If your RYDIS H65 can't return to the charging station, reset the detection distance as recommended below.
  - In a narrow area, set it to 16ft (5m), and in a wide area, set it to 26ft (8m).
  - If you set the detection distance to 26ft (8m) in a narrow area, the Auto Charging may be interfered with.


## Installing the Side Brushes

- Check for the L mark under the side brush.

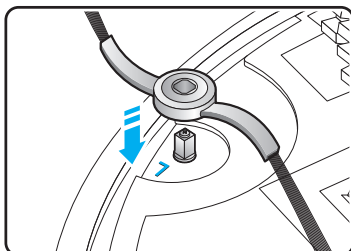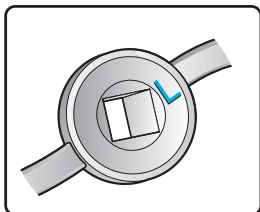



- Align with the L mark under the RYDIS H65 and install the L brush.

Rear side

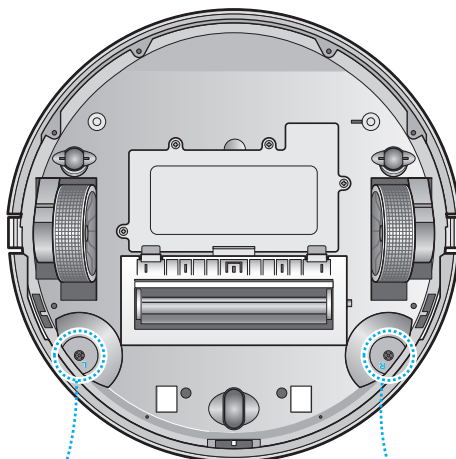

Front side

- Check for the R mark under the side brush.

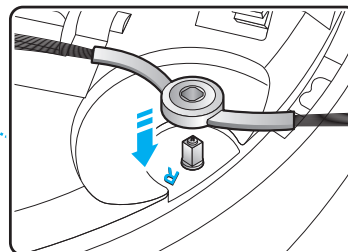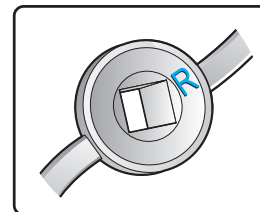


- Align with the R mark under the RYDIS H65 and install the R brush.


# Installing the Wet/Dry Disposable Mop

You can clean by attaching the disposable wet or dry mop that can be purchased separately in stores.

- 1 • Attach a wet or dry mop to the mop pad.

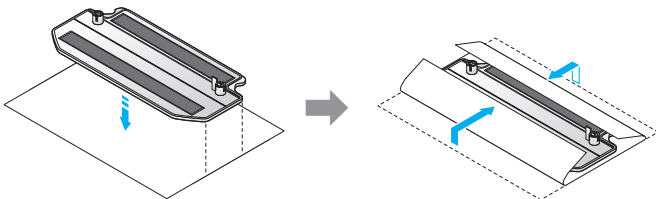


- 2 • Turn the system power switch off (on the rear side of the RYDIS H65).

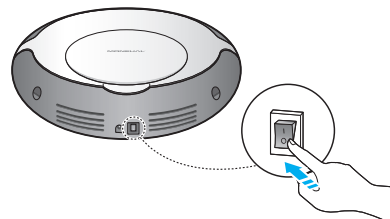


- 3 • Attach the mop pad.  
Fit the joint parts to the holes of the RYDIS H65.



► If you apply excessive force to the mop pad when you install it on the RYDIS H65, the joint parts of the mop pad may be damaged.

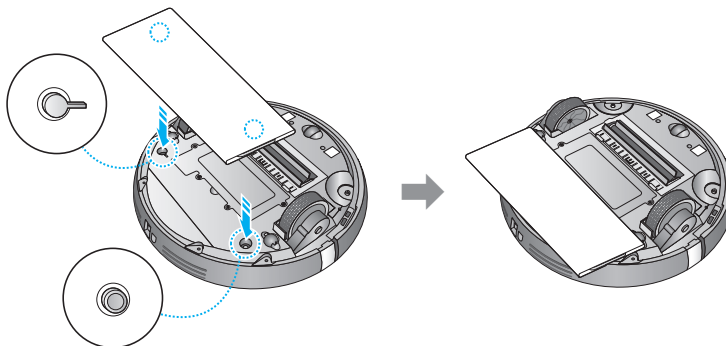

- 4 • Flip it over and turn the system power switch on.

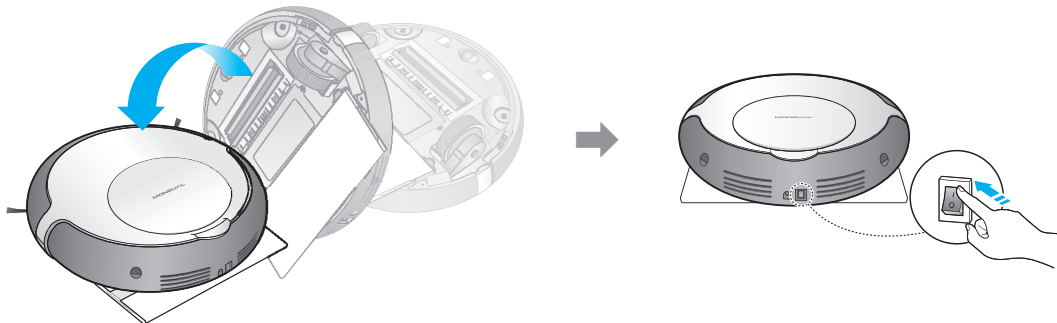


- After cleaning, remove the mop pad from the RYDIS H65.
- Remove the disposable mop from the mop pad.


# Charging

If you have prepared the charging station, main body, and remote control, you must then charge the RYDIS H65 to use it. To charge the RYDIS H65, follow these steps:


- 1
- Turn the system power switch on.

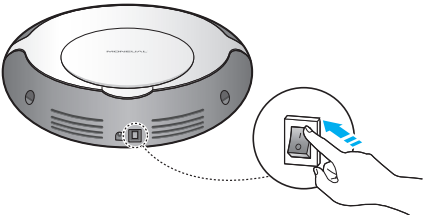


- 2
- Hold the RYDIS H65 with both hands and put it on the charger.
    - Match the terminals of the RYDIS H65 with the terminals of the charging station.
    - Put the RYDIS H65 in the front center of the charging station and push the RYDIS H65 toward the charging station slowly until the status indicator turns solid red.
    - Blue lamp: charging station power on indicator
    - Red lamp: H65 charging indicator

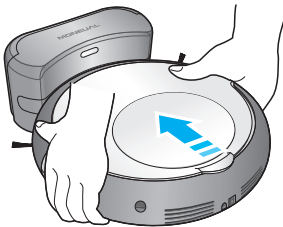


- 3
- Use the RYDIS H65 after charging.
    - It takes up to 1 hour to charge the battery fully.

Battery Status Indicator 	Charging	Blinking every second
	Charging completed	Solid lamp with 3 bars without blinking
	Low battery	Blinking 4 times every second

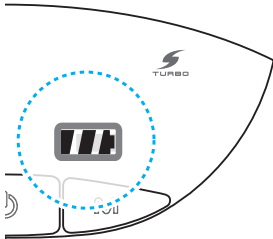


## Auto Charging


- After it is finished cleaning, the RYDIS H65 automatically returns to the charging station and starts charging.
- When the battery is low during the cleaning, the battery indicator will be blinking rapidly. The RYDIS H65 automatically returns to the charging station for charging. Once the charging is completed, it will return to the previous location where it left off.

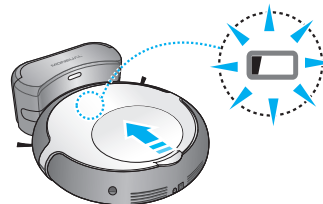

- You can also charge the RYDIS H65 by selecting the Mode button then choosing the charging mode and hitting the Start/Stop button. H65 will return to the charging station by itself.

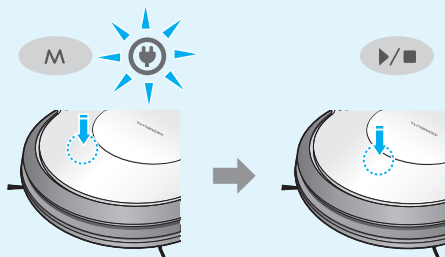

- You can also charge the RYDIS H65 by connecting the power adaptor directly to the power jack on the rear side of the RYDIS H65.

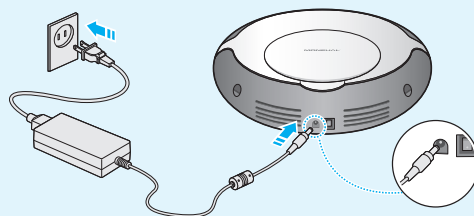




# Before You Start

Check the following before you start the RYDIS H65.

- 1 Be careful not to break the RYDIS H65 when you pull the RYDIS H65 out of the box.**  
For information of installing the RYDIS H65, see page 13.
- 2 Check the location (L/R) of the brushes and install them.**  
For information on installing the brushes, see page 14.
- 3 Pull the RYDIS H65 out and manually charge it fully first.**  
When you start the RYDIS H65 for the first time, it may not work, as the battery has probably been discharged. For information on manual charging, see page 17.
- 4 Remove any obstacles on the floor.**  
Remove small objects, clothes, and fragile objects from the floor before cleaning. Fold up lengthy carpet/rug tassels or keep the RYDIS H65 away from them.
- 5 If the dust bin is full, the cleaning performance will be reduced. Emptying the dust bin frequently is highly recommended.**  
For information on cleaning the dust bin, see page 27.
- 6 If there is anything on cliff detection sensors or wheels, remove it.**  
This may cause failure or malfunction of the RYDIS H65. For information on cleaning cliff detection sensors and wheels, see page 29.
- 7 Children and seniors may be surprised at the sight of the RYDIS H65 in operation.**  
Please let children and seniors know about the operation of the RYDIS H65.
- 8 Be careful not to drop the RYDIS H65 from a high place.**  
Do not use the RYDIS H65 on a narrow or a high place such as a desk, table, etc. If shoes are placed side by side at the entrance to the living room, the RYDIS H65 may recognize them as the floor, which may cause falling.
- 9 After charging is complete, keep the RYDIS H65 docked in the charging station, or turn the system power switch off which is located on the rear side of the RYDIS H65.**

## What do you want to clean?

   The H65 provides 3 basic cleaning mode (Hybrid Cleaning, Vacuum Cleaning and Mop Cleaning) in which you need to choose one. Hybrid Cleaning performs mop + vacuum at the same time. Vacuum Cleaning performs vacuum only. Mop Cleaning performs mopping only. Depending on the user's preference, you can choose among them to maximize the cleaning in your living environment.


Cleaning Type	Function	For Where	How to Select	Operation Lamps	
Hybrid Cleaning	Moping, Vacuuming at the same time	Hard floor	Select Hybrid with the <b>Mode</b> button on the Control Panel	<b>HY-BRID</b>	
Vacuum Cleaning	Vacuuming Only	Hard floor and Carpet	Select Vacuum with the <b>Mode</b> button on the Control Panel	<b>VAC-UUM</b>	
Mop Cleaning	Mopping Only	Hard floor	Select Mop with the <b>Mode</b> button on the Control Panel	<b>MOP</b>	




## Hybrid Cleaning

In Hybrid Cleaning, the RYDIS H65 performs the Vacuum Cleaning and Mop Cleaning at the same time. Hybrid Cleaning offers a comprehensive floor care solution because of the use of the twin side brushes, the main brush, the BLDC suction, and Web/Dry Disposable Mop all together. The Hybrid Cleaning is recommended for comprehensive cleaning on your hard floors.


- 1 • Follow the directions on page 15 to attach the Wet/Dry Disposable Mop.

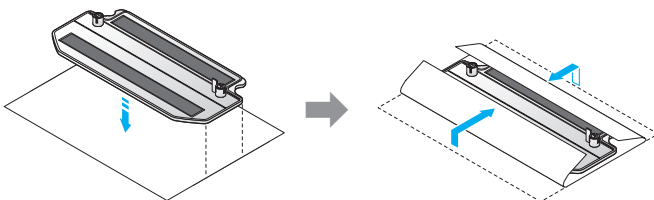


- 2 • Turn the main **power** button on.

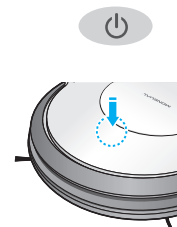

- 3 • Select the Hybrid Cleaning with the **Mode** button on the Control Panel and press the **Start/Stop** button.

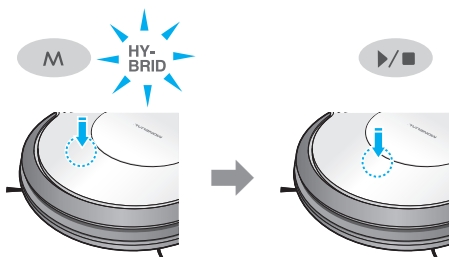

- 4

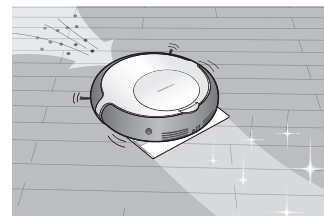




## Vacuum Cleaning

Vacuum cleaning is used where the needs are vacuum suction only without mop cleaning. It can be used on hard floor or carpet.


- 1 • Turn the system power switch on.

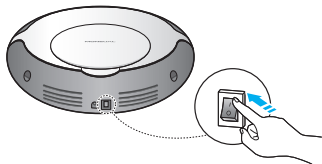


- 2 • Turn the main **power** button on.



- 3 • Select the Vacuum Cleaning with the **Mode** button on the Control Panel and press the **Start/Stop** button.

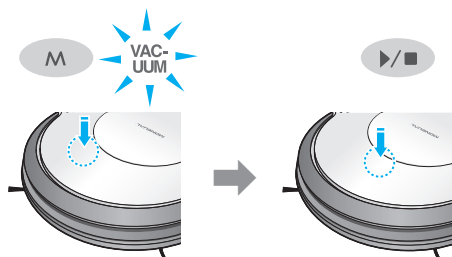


- 4

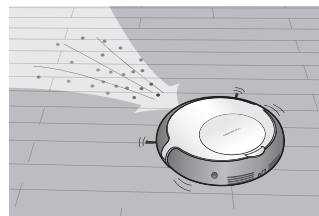

## MOP Mop Cleaning

Mop cleaning mode is used for when you need mopping only without vacuuming. It can be used only on hard floor.


For H65, Disposable Mop  
with Wet/Dry Mop

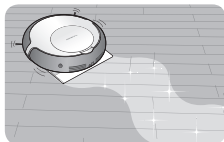

S Pattern




- 1 • Follow the directions on page 15 to attach the Wet/Dry Disposable Mop.

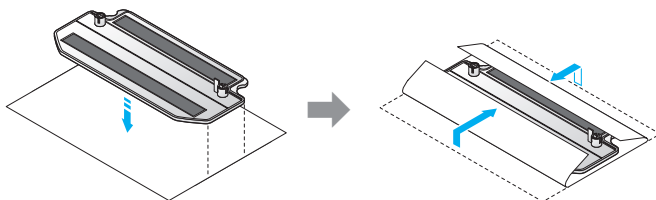


- 2 • Turn the main **power** button on.



- 3 • Select the Mop Cleaning with the **Mode** button on the Control Panel and press the **Start/Stop** button.

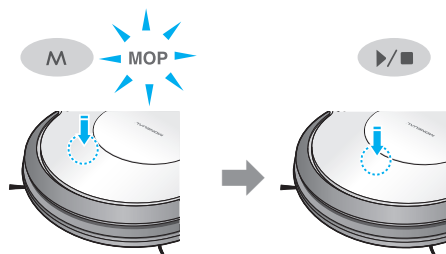

- 4

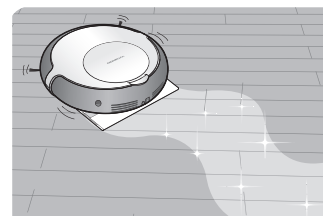

## Shadow Cleaning


You can clean areas under your bed, sofa, or furniture that are difficult to clean with an upright vacuum cleaner or by hand.



- ▶ To use Shadow Cleaning mode, turn the room light on. In a dark room, the RYDIS H65 can't detect the space under the bed or furniture.
- ▶ The RYDIS H65 moves to a place under the bed or furniture to start shadow cleaning. To reduce the time spent moving through the room, put the RYDIS H65 in front of the bed or furniture under which you want to perform shadow cleaning.


1

- Put the RYDIS H65 in front of a bed or furniture. Recommend turn the room light on if any.

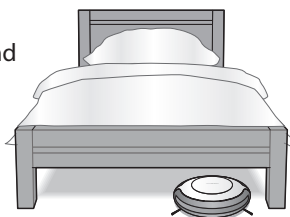

2

- Turn the system power switch on.

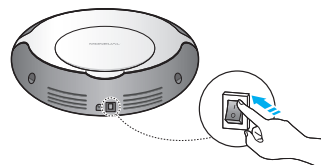


3

- Turn the main **power** button on.




4

- Select the Shadow Cleaning with the **Mode** button on the Control Panel and press the **Start/Stop** button.

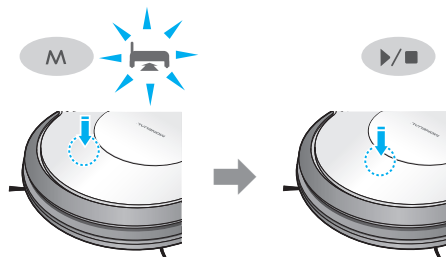

5

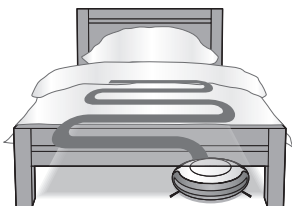


- ▶ RYDIS H65 provides 15 minutes of the Shadow Cleaning Mode time, and then it will stop in front of a bed or furniture. If you have a huge space that needs to be cleaned by Shadow Cleaning, you can do it again.
- ▶ Hybrid Cleaning and Vacuum Cleaning are supported with Shadow Cleaning. Mop Cleaning is not supported with Shadow Cleaning.


## TURBO Turbo Option

While you are using the Hybrid / Vacuum / Shadow Cleaning, the Turbo Option is turned on by default. (Turbo Option is disabled during Mop Cleaning) Though, you can turn off the Turbo Option to increase cleaning time by following the steps below:


- 1 • Select either Hybrid / Vacuum / Shadow Cleaning.

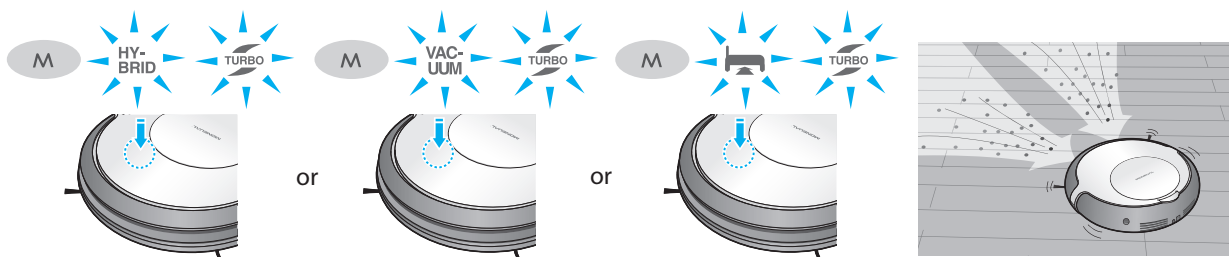

- 2 • Press and hold down the **Start/stop** button 2-3 seconds on the control panel until the Turbo Option indicator turns off on the control panel.

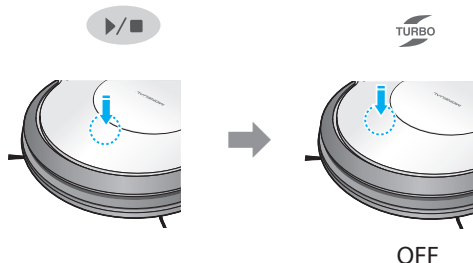

- 3 • The H65 is now cleaning without Turbo Option.

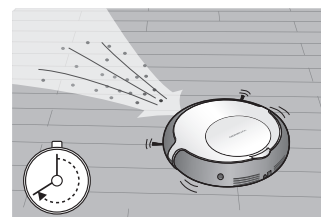


► Keep in mind that resetting the main power will automatically enable the Turbo Option.

# Language Setting




► You can select a language for voice guidance from the ones available in the system.

1

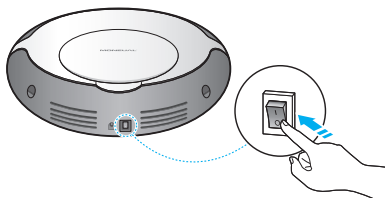


Turn the system power switch off.

2


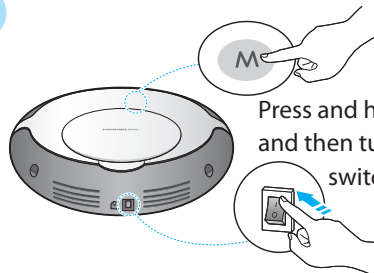


Press and hold the **Mode** button, and then turn the system power switch on.

3

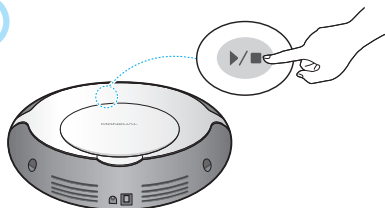


Keep pressing the **Start/Stop** button until you have reached the language you desire.

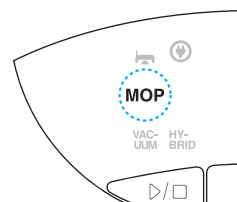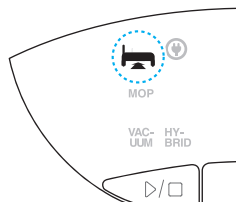

Whenever you press the **Start/Stop** button, you will hear the following sentence as a different language.

- “Starting automatic cleaning.”
- “Cleaning is canceled.”

4

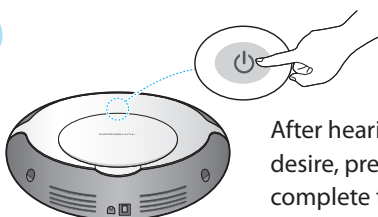

After hearing the language you desire, press the **power** button to complete the language setting.




► Hit the **Start/Stop** button once for English, twice for Spanish, and 3 times for French.

Language	English	Spanish	French
No.	1	2	3


## Cleaning the Dust Bin

1

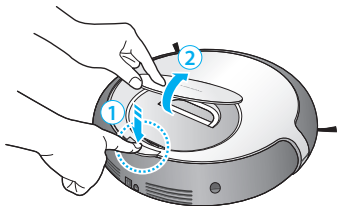


Remove the dust bin cover.

2

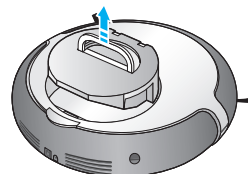


Remove the dust bin.

3

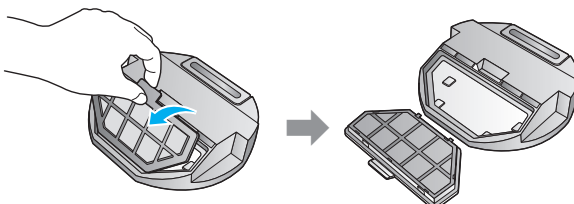


Remove the dust filter.

4

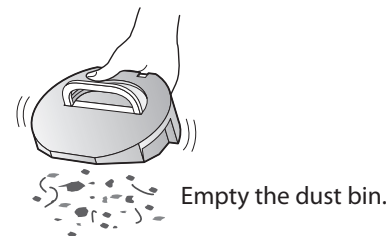


5

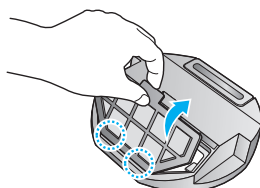

Input the dust filter.

6

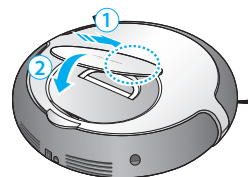

Input the dust bin in the RYDIS H65.

► Make sure to follow the directions carefully when installing the dust bin.

7



Input the dust bin cover.




► To clean the dust filter and determine its lifetime, see page 28.

## Cleaning the Dust Filter




- ▶ The dust filter can be easily cleaned by gently scraping off the surface or compressed air.
  - The dust filter is reusable.
  - It is recommended not to clean with water.
- ▶ We recommend that you clean the dust filter whenever the bin is more than 2/3 full.
  - If you do not clean the dust filter, the suction power of the RYDIS H65 can be reduced.
- ▶ Replace the dust filter if you notice a tear or a hole.
  - The lifetime of a dust filter is about 3 months for normal use, but may vary depending on the frequency and operating environment.

1

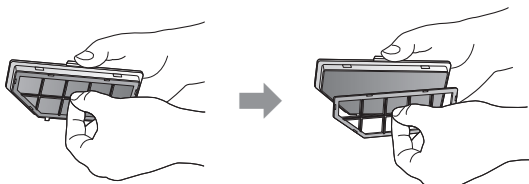


Remove the dust filter.

 2



Clean the dust filter.  
(Remove dust from each of the four filters by blowing.)

3

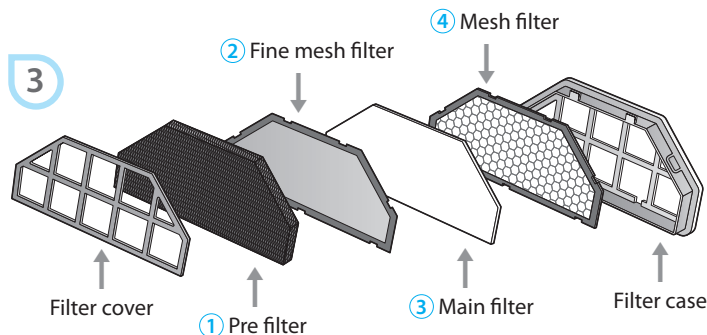

Assemble the dust filter .  
(Assemble four filters as described above)




- ▶ Applying excessive force will damage the dust filter cover while disassembling the dust filter.
- ▶ If you assemble the filter incorrectly, the performance may be degraded or the suction power may be reduced.

# Cleaning Sensors and Wheels


## Cleaning sensors

- Clean (blow or wipe) the three sensors with the included cleaning brush or a cotton swab.
  - If sensors are severely contaminated, wipe with a moistened cotton swab.
  - Do not use benzene or alcohol to clean sensors.

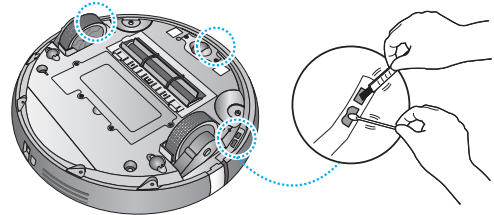


## Cleaning wheels

- Clean wheels using the brush.
  - To clean the front wheel, remove the screws and remove the wheel, and clean it with the brush.
  - To clean the two main wheels, clean them with the brush while rotating slightly by hand.
  - Remove foreign objects such as hair that obstruct the wheel's operation.

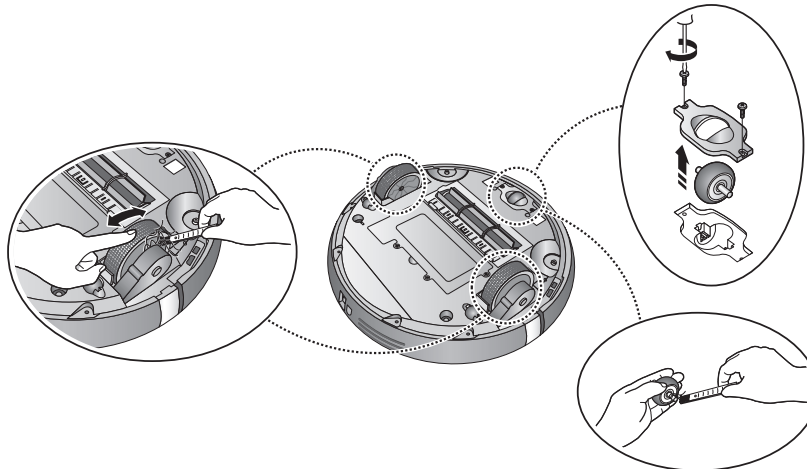


## Cleaning the Dust Inlet

1

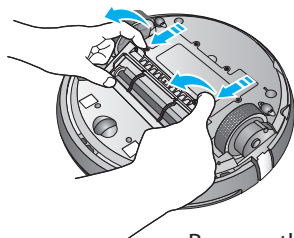


Remove the dust inlet cover.

2

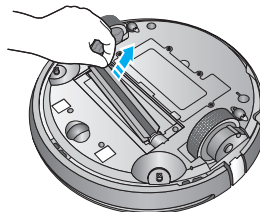


Remove the main brush.

3

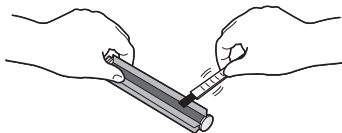


Clean the removed main brush with the cleaning brush.

4


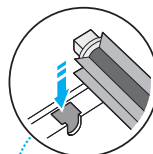


First, insert the main brush's hexagonal head to the matching hexagonal socket on the RYDIS H65.

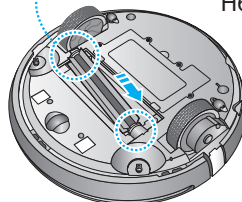

Second, install the main brush by inserting the bearing to the housing. Make sure to orient bearing so that the smaller tip is facing inward.

5

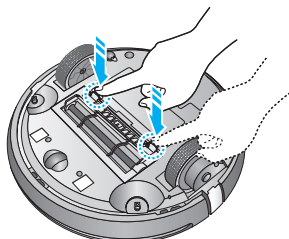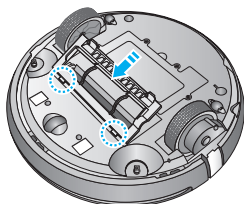

To reinstall the dust inlet cover, insert the 2 tips to the matching holes on RYDIS H65.

# Using and Managing the Battery

The battery is a consumable item. The more you use the battery, the shorter the battery's lifetime.

## Battery lifetime

- We guarantee 12 months of use in a normal environment.
- Always charge the battery fully for the best use experience.
- The battery lifetime may vary depending on the use environment.

## Charging battery


- If you are using the RYDIS H65 for the first time, please fully charge the battery first.
- It takes about 2 hours to charge the battery fully.

## To extend battery life


- If you don't intend to use the RYDIS H65 for an extended period of time, turn off the system power switch after charging the battery fully.
- Clean the dust inlet, dust bin, main brush, and side brushes frequently. If you use the RYDIS H65 with the dust bin full, it may shorten the battery lifetime.
- Always use the RYDIS H65 after fully charged.
- Do not use the RYDIS H65 in a place where it will be exposed to direct sunlight or near the heating source.

## Battery replacement

- If you notice that the operating time has been significantly reduced, you may need to replace the battery.
- You must use a battery that is manufactured by Moneual.
- Remove the battery from the RYDIS H65 when the system power is off.
- Dispose of your old batteries according to the local laws and regulations of your region.  
To purchase an extra battery, please contact our customer service.
- If it is difficult to replace the battery by yourself, please contact our customer service.

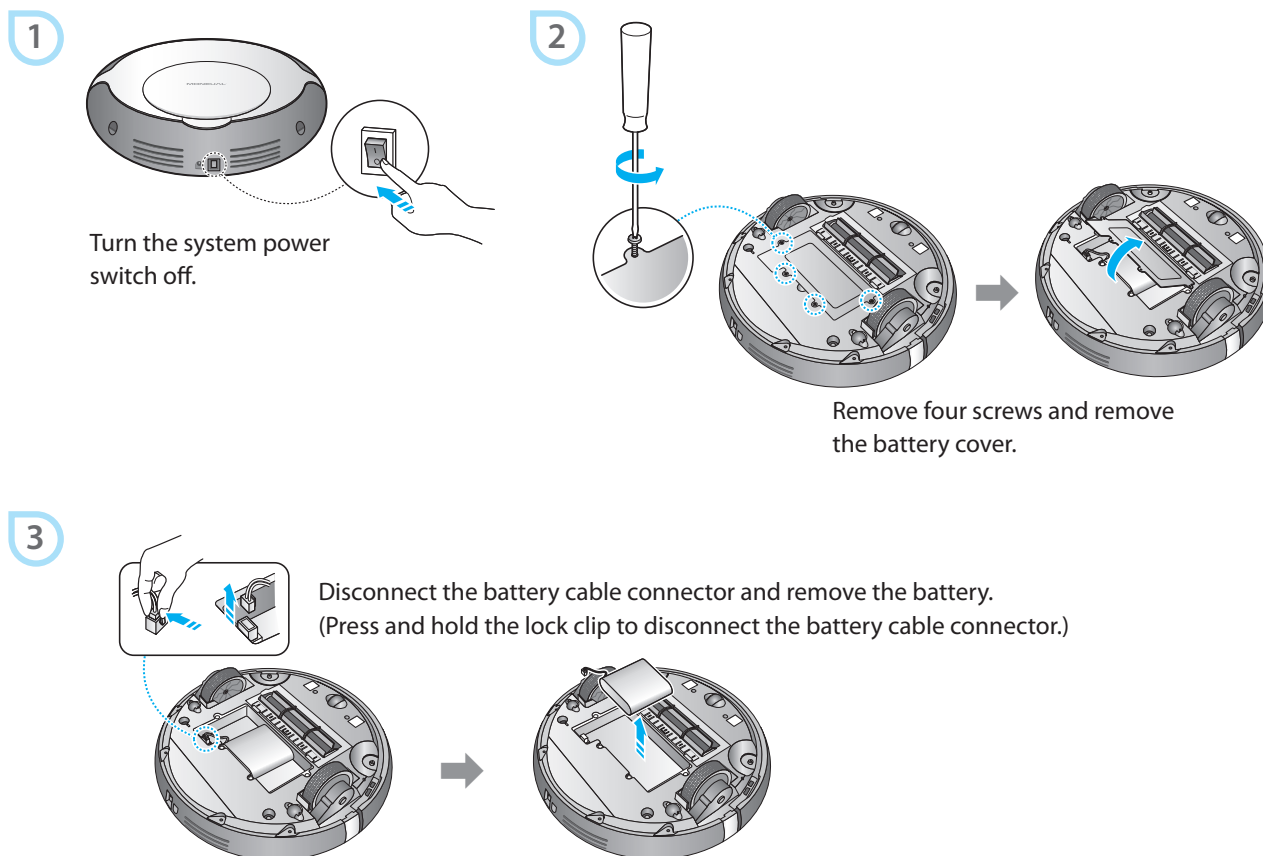

4

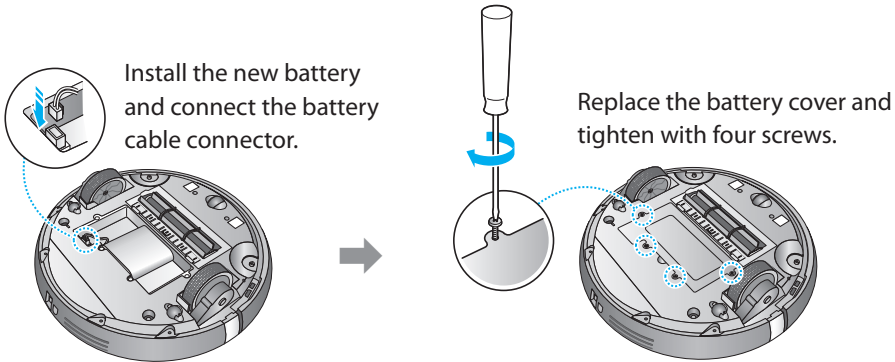

## Battery handling and safety information

- If you leave the fully discharged battery for a long time, the battery may become damaged and you may not be able to use it.
- If you use a battery other than Moneual's for use with the RYDIS H65, the RYDIS H65 or the battery may be damaged.
- Remove the battery before disposing of the RYDIS H65.

## Voice Guidance

Following voices are the basic voice list. Depending on your model, some contents of these voices may differ from the actual voices.









Voice Guidance	
Starting Hybrid cleaning.	The RYDIS H65 will start Hybrid cleaning.
Starting Vacuum Cleaning.	The RYDIS H65 will start Vacuum cleaning.
Starting Mop cleaning.	The RYDIS H65 will start Mop cleaning.
Starting Shadow Cleaning.	The RYDIS H65 will start Shadow cleaning.
Starting Intensive Cleaning.	The RYDIS H65 will start Intensive cleaning.
Cleaning is completed.	The cleaning is completed.
Cleaning is cancelled.	When you press the <b>Start/Stop</b> button during operating.
Turbo option has been activated	The suction power is changed into Turbo.
Threshold option has been activated	The RYDIS H65 can climb a threshold.
Double Clean option has been activated	The RYDIS H65 will clean the room 2 times.
Moving toward the charging station.	When you press the <b>CHARGE</b> button or the RYDIS H65 is moving to the charging station for auto charging.
Starting to charge.	The charging station will start the charging process.
Will Start Cleaning in 1 hour	The time setting is completed for 1 hour later cleaning.
Daily Scheduled Setup Completed	The time setting is completed for every day cleaning.








Maintenance Messages	
Out of battery.	The battery has been discharged.
Dust Bin is missing.	The dust bin has been removed.
Please place the cleaner on the floor.	The RYDIS H65 has been lifted from the floor.
Please check the wheels.	The wheels are jammed.
Please check the main brush.	The main brush is jammed with hairs or other obstacles.
Please check the side brush.	The side brushes are jammed with hairs or obstacles.
Empty the dust bin.	The dust bin is full or the dust inlet is blocked.
Attach the mop pad for the hybrid cleaning	When you press <b>Hybrid</b> button while the mop is not installed.
Detach the mop pad for the vacuum cleaning	When you press <b>Vacuum</b> button while the mop is installed.
Can not find the charging station	When the H65 can not find the charging station due to several conditions.
There is an error.	An error has occurred (refer to the error code).

## Error Message Description



- ▶ The RYDIS H65 will display a combination of numbers and icons to inform the users of what the issue is. Using the information below, it is important to resolve the issue first as pressing any button will clear the error message.
- ▶ If the problem has not been solved with one of the solutions below, please contact our customer service.
- ▶ The error voice guidance comes only one time when the error has occurred. You can re-check the error status by pressing the SELECT button on the remote control.

VAC- UUM 	Cause	The battery is fully discharged, so the RYDIS H65 does not work.
	Voice	Out of battery.
	Solution	Charge the RYDIS H67 Pro manually.
VAC- UUM  	Cause	The wheel motor has been overloaded. Some obstacles (hairs, wires, etc.) are jammed on one or both wheels.
	Voice	Please check the wheels.
	Solution	Move the RYDIS H65 to another place. Remove obstacles on the wheel(s).
VAC- UUM 	Cause	The dust inlet fan is overloaded.
	Voice	There is an error.
	Solution	Remove obstacles in the dust inlet and empty the dust bin.
VAC- UUM  	Cause	The main brush is overloaded.
	Voice	Please check the main brush.
	Solution	Remove obstacles (hairs, wires, etc.) in the main brush.
HY- BRID 	Cause	You tried to charge the RYDIS H65 without the battery.
	Voice	No Battery.
	Solution	Check if the battery is installed in the RYDIS H65 properly.
HY- BRID 	Cause	The battery failure.
	Voice	There is an error.
	Solution	Contact your customer service.

HY-BRID 	Cause	You operated the RYDIS H65 without the dust bin.
	Voice	Dust bin is missing.
	Solution	Replace the dust bin.
HY-BRID 	Cause	Both main wheels have been lifted.
	Voice	Please place the cleaner on the floor.
	Solution	Put the RYDIS H65 on the floor or move it to another place.
MOP 	Cause	Escape rough road mode continually occurred in excess of the limit while moving.
	Voice	Please check the front wheel.
	Solution	Remove obstacles from the front caster and empty the dust bin.
MOP 	Cause	Bumper crash continually occurred in excess of the limit while moving.
	Voice	Please check the bumper.
	Solution	Remove obstacles from the bumper and check if the bumper has been dented.
MOP 	Cause	The RYDIS H65 has continually detected the risk of falling more than limitation.
	Voice	Please check the bottom sensor.
	Solution	If the color of the floor is black, move the RYDIS H65 to another place. Clean or wipe obstacles from the cliff sensors (see page 29).
MOP  	Cause	Other error.
	Voice	There is an error.
	Solution	Contact your customer service.

# Troubleshooting

Problem	Solution
If the RYDIS H65 does not work or if the power is not turning on.	<ul style="list-style-type: none"> <li>• Turn on the system power switch at the lower-rear side of the RYDIS H65.</li> <li>• Check the battery level lamp on the control panel.</li> <li>• Charge the battery if the battery level is low.</li> </ul>
If the RYDIS H65 does not charge.	<ul style="list-style-type: none"> <li>• Clean the charging terminals on the bottom of the RYDIS H65 and the charging station.</li> <li>• Check if the charging lamp is lit up blue for power on and red for charging. If not, then check if the power cord is connected to the charging station.</li> <li>• Turn on the system power switch at the rear of the RYDIS H65.</li> <li>• You can also charge the RYDIS H65 by connecting the power adaptor directly to the power jack at the rear side of the robot vacuum cleaner.</li> </ul>
If the suction power is weaker than normal.	<ul style="list-style-type: none"> <li>• Empty the dust bin.</li> <li>• Clean the filter of the dust bin.</li> <li>• Check if there is anything blocking the dust inlet.</li> </ul>
If the main brush does not rotate.	<ul style="list-style-type: none"> <li>• Check if there is anything tangled in the main brush.</li> <li>• Make sure the main brush has been installed properly.</li> </ul>
If the operational noise is louder than normal.	<ul style="list-style-type: none"> <li>• Check if there is anything tangled in the main brush.</li> <li>• Make sure the main brush has been installed properly.</li> </ul>
If the RYDIS H65 is not working normally during the cleaning.	<ul style="list-style-type: none"> <li>• Check if the mop pad is installed properly.</li> <li>• Clean the sensors with a soft cloth. For more information, check on page 29</li> </ul>
If the RYDIS H65 does not respond when you press a button.	<ul style="list-style-type: none"> <li>• For your safety, if you are directly connected to the power cord without the charging station, the buttons will not be recognized. After disconnecting from the power cord, the buttons will be recognized.</li> </ul>
If the cleaning time has been shortened.	<ul style="list-style-type: none"> <li>• Confirm that the red light on the charging station is lit up.</li> <li>• Confirm that the RYDIS H65 is fully charged by checking the battery status lamp on the display. Three solid bars indicate that the battery is fully charged.</li> <li>• Contact Moneual support to replace or repair the battery if it does not solve the issue above.</li> </ul>

Problem	Solution
I cannot select the Turbo Option (suction power).	The Turbo option is supported by the Hybrid and Vacuum cleaning mode only. The Turbo option is not supported while in the Mop cleaning mode.
If the RYDIS H65 cannot climb over a threshold higher than 0.4 inch (1 cm).	<ul style="list-style-type: none"> <li>• The RYDIS H65 has been set in default not to climb over a threshold higher than 0.4 inch (1 cm).</li> </ul>
If the Vacuum Cleaning mode has an error message.	<ul style="list-style-type: none"> <li>• If the Disposable Mop is attached, the voice guidance will say “Detach the mop pad.” Remove the mop pad.</li> </ul>
I cannot select the Mop Cleaning mode with the Shadow Cleaning mode.	<ul style="list-style-type: none"> <li>• The Shadow Cleaning mode is only supported by the Hybrid and Vacuum Cleaning mode. The Shadow Cleaning mode is not supported if you select the Mop Cleaning mode.</li> </ul>

# Specifications

## RYDIS H65

Model	H65
Dimensions	13.7 inches (34.8 cm) (Diameter) x 3.3 inches (8.5 cm) (Height)
Weight	5.9 lbs (2.674 kg)
Speed	Cleaning mode: 12.6 inches/sec. (32 cm/sec.), Driving mode: 11.8 inches/sec. (30 cm/sec.)
Operating noise	Max. 68 dB
Power consumption	Max. 20 W
Battery	Lithium iron phosphate (LiFePO4) 12.8 V DC (1400 mA)
Dust bin capacity	600 ml
Charging time	Max. 60 minutes
Operating time	- About 60 minutes - About 40 minutes (Turbo Cleaning) - About 1.5 hours with wet mop and 2.5 hours with dry mop (Mop Cleaning)

## Charging Station

Model	MRD6500
Dimensions	10.4 inches (26.4 cm) (W) x 7 inches (17.8 cm) (H) x 5.3 inches (13.5 cm) (D)
Weight	1.3 lbs (606 g)
Input Power	18 V DC
Output Power	18 V DC
Signal Transmission Distance(IR)	16.4 ft (5 m) / 26.2 ft (8 m)

**MONEUAL®**

**MONEUAL®**

**MONEUAL®**

# Moneual Robot Vacuum Cleaner Limited Warranty

## A. Limited Warranty

Moneual, Inc. ("Moneual") warrants the product line of Moneual Robot Vacuum Cleaner ("The Product") you have purchased, from Moneual or from a Moneual Authorized Reseller, is to be free from defects in materials and workmanship under normal use during the period specified below.

The warranty period begins on the date of purchase. Your original purchase invoice (sales receipt), is your proof of the date of purchase. If you cannot provide the original purchase invoice (sales receipt), the warranty period will be based on the manufacture date-code shown on the Product.

A Product that has been exchanged is warranted starting at the original date of purchase.

The Warranty period for the product line is as follows:

Parts    One (1) Year

Labor    One (1) Year

This warranty extends only to you, the original purchaser. It is not transferable to anyone who subsequently purchases, leases, or otherwise obtains the Product from you. It excludes expendable parts. During the warranty period, Moneual will repair or replace defective hardware with factory refurbished parts and products. All exchanged parts and Products replaced under this warranty will become the property of Moneual. During the warranty period, there will be no charge for labor or parts. If, after repeated efforts, Moneual is unable to repair the Product to good working order, you may get a replacement unit from Moneual, please note the replacement model may not be the exact same model, Moneual will always replace with equal or better spec Product.

To ensure timely response to a service request, please be sure to register your Product at <http://www.moneualusa.com>. Within ten (10) calendar days from the time you purchase the Product, be sure to put in the purchase date, location, and serial number associated with the Product purchase, technical support will ask for sales receipt or other proof of purchase to determine warranty coverage.

## B. Warranty Limitation; Exclusion; Exclusive Remedies

This Limited Warranty does not extend to any Product that has been damaged

1. during or as a result of use other than for its normal intended purpose, failure to use the Product in accordance with the User's Manual which accompanies it, misuse, abuse, or negligence;
2. by the use of parts not manufactured or sold by Moneual;
3. by modifications of the Product;
4. as a result of services by anyone other than Moneual Service Center;
5. improper transportation or packing when returning the Product to Moneual Service Center;
6. unusual physical or electrical stress or interference, failure or fluctuation of electrical power, lighting, static electricity, fire, natural disasters, or acts of God.

Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages for consumer products, and some states or provinces do not allow limitation on how long an implied warranty lasts. In such states and provinces, the exclusion or limitation of this limited warranty may not apply to you.

This Limited Warranty gives you specific legal rights. You may also have other rights that vary from state to state. You are advised to consult applicable state or provincial laws for full determination of your rights.

## C. Obtaining Carry-In or Mail-In Warranty Services

Subject to the following terms and conditions, you are entitled to mail-in repair service during the applicable warranty period.

1. Prior to obtaining service you must contact the Moneual Customer Service Center at 1-866-399-0600. Please have the model number, serial number, place of purchase, and date of purchase with the receipt of purchase, please have it ready when you call. The serial number (S/N) and model number are located on the back/ bottom of the Product.

2. Moneual Technical Support will attempt to help you resolve your problem over the telephone. During problem resolution, Moneual will require your assistance in performing routine diagnostic procedures. If appropriate, Moneual will then issue you a Return Merchandise Authorizations (RMA) number to be used as a means of identifying the Product.
3. After calling 1-866-399-0600 to obtain a Return Merchandise Authorization number. Mail-In Repair service is available for Products purchased and located in the continental United States, you are responsible for the shipping charge to ship the Product to the Service Center, Moneual will pay for the shipping to ship the Product back to you. Product purchased in Canada, Alaska, Hawaii and Puerto Rico, you are responsible for the shipping charges to and back from the Moneual Service Center.
4. All Mail-In service must take place by returning the Product to the Moneual Service Center. You must prepay any shipping charges, export taxes, custom duties and taxes or any other charges associated with transporting of the Product to the Moneual Service Center. In addition, you are responsible for insuring the Product during shipment. You assume the risk of loss during shipment. Moneual is not responsible for loss or damage during shipping to the Moneual Service Center.
5. Use the original shipping and packing materials and include a description of the symptoms of the problem. If the original shipping and packing materials and boxes are not available, please make sure the Product is properly packaged and secured inside a shipping container. The Return Merchandise Authorization (RMA) number must be placed on the exterior of the shipping container. Physical damage that occurred during shipping is not warranted and not covered by the limited warranty.
6. Include your name and address, proof of the place and date of purchase (from original Sales Receipt), and the serial number and model number of the Product. The serial number and the model number are located on the back of the Product.
7. Moneual is not responsible for a Product shipped to the Moneual Service Center that is scratched or dented, including but not limited to, scratches, dents, or is not from normal wear and tear use on the Product, the Product will be repaired or replaced with a similar refurbished Product in similar condition as the original Product that was returned. Products shipped to the Moneual Service Center with missing parts will be replaced without those parts. Products that are beyond repair will be replaced with refurbished Products in equal or better spec as the original Product that was returned should the same model not be available.
8. Cross-shipping. For customers that need the replacement Product as soon as possible to reduce down time and loss productivity, cross-shipping can be arranged with a Credit Card on file as collateral. The value of the Product will be authorized on the customer's credit card and held as collateral upon the shipment of the replacement Product from Moneual Service Center, the amount authorized will be cancelled upon receipt of the defective Product back from the customer. The same terms and conditions applied to this paragraph (#8) as are stated in paragraph #4-#7. Please see above. The authorization is valid for 30 days, and will be processed for payment if the defective Product is not received. (Caution for Debit Cards, upon authorization, the amount may be deducted from your balance, so the use of credit card is strongly suggested).

## Additional Information

You may request additional information on how to obtain warranty Services by contacting Moneual or any Moneual Service Center. You may also request information on how to obtain warranty service or the location of the Moneual Service Provider by calling or contacting:

Moneual Customer Service Center (On Monday – Friday, 9AM – 5PM PST)

Tel: 1-866-399-0600

Outside of USA: (909) 334-7500

e-mail: [support@moneual.com](mailto:support@moneual.com)

13825 Norton Ave

Chino, CA 91710

Please note:

Warranty is only valid for the Original Owner purchased from an authorized reseller. Second owners or eBay purchase carry no warranty.

All returns, exchanges, refunds, or repairs should be referred back to the origin of purchase.

Proof of purchase (Receipt) will be required for warranty services.

**MONEUAL®**



### **Moneual Customer Service**

On Monday - Friday, 9AM - 5PM PST

**Tel: 1-866-399-0600**

**Outside of USA: (909) 334-7500**

**[support@moneual.com](mailto:support@moneual.com)**

Before you call for service, please be ready to provide the following information:

- Model name
- A description of your problem
- Phone no. & address



[www.moneualusa.com](http://www.moneualusa.com)